


TONSUM

Four in One Bluetooth Controller

USER MANUAL

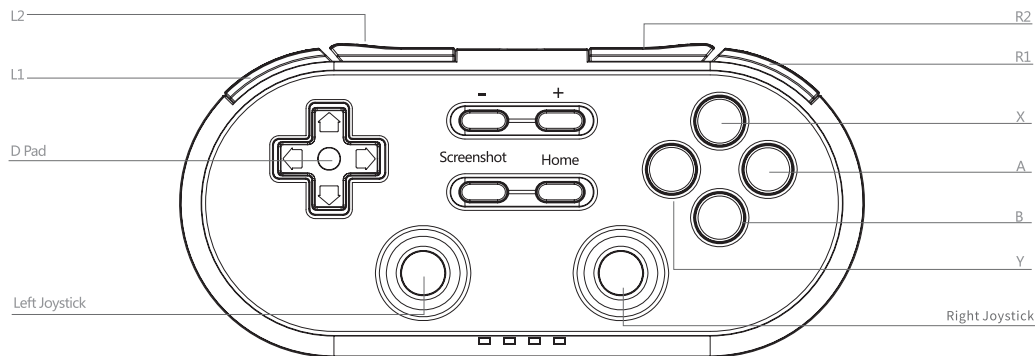

Game Controller supports different platforms include ANDROID/PS3/SWITCH/PC. You can get to additional consoles by pressing key combination.

Bluetooth Connection:

Switch Bluetooth Mode:

Press B+HOME buttons for 3 seconds. The second light flash and go into connection status.

PS3 Bluetooth Mode:

Press A+HOME buttons for 3 seconds. Connect the controller with PS 3 console via cable. Four lights flash and go into connection status.

When the wired connection is successful, unplugging the cable and indicator light will flash for 2 to 10 seconds to connect to the PS3 console via Bluetooth.

When connected to your PS3, "-" button = "SELECT" button, "+" button = "START" button, "HOME" button = "PS" button, "Screenshot" button = "TURBO" button

Android Bluetooth Mode:

Press Y+HOME buttons for 3 seconds, then the first led light Flash. Go to your Android device's Bluetooth setting, pair with "GamePad" Bluetooth device, The first led light will solid red when connected successfully.

When connected to your phone, "-" button = "SELECT" button, "+" button = "START" button, "HOME" button = "Power on/off" , "Screenshot button" = "TURBO" button.

USB Mode :

Press L1+HOME buttons.

The forth light flash and connect the controller to ANDROID/PS3/SWITCH/PC via USB cable. In this mode, the controller will automatic recognition the platform.

(You can get to X-input/D-input mode by pressing HOME button for 5 seconds.)

Customer care email: xwenyangus@outlook.com